



Specifications

Striver Tool SC99



September 2022

The Striver seal and bushing driver makes S-camshaft maintenance quick and easy. Now there is no need to remove the hub in order to extract the S-camshaft. Installation on the new bushing and seal is simple and precise. The Striver seal and bushing driver eliminates the risk of seal damage. The mechanic can tap his hammer on the Striver not the seal, when installing the new seal and bushings.



REMOVE

INSTALL

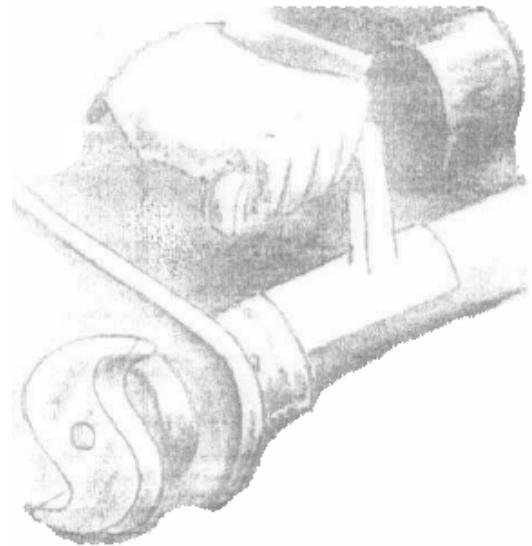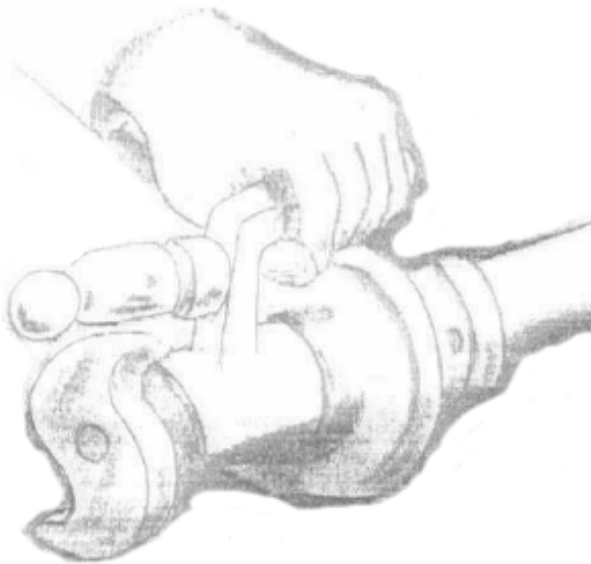

buyTSI.com - 800.223.4540

Tire Service International, LLC
3451 S. 40TH ST.
PHOENIX, AZ 85040

Office: 602.437.5020
Email: sales@buytsi.com
Fax: 602.437.5025