



**MODEL CH-5, CH-5AL**

## REPAIR PARTS

No.	Description	Part No.	No.	Description	Part No.
1.	Airtank	N/A	8.	90° NPT	03.104
2.	Pipe Nipple	01.104	9.	Safety Release Valve	05.102
3.*	Discharge Valve (Includes Handle)	02.102	10.	Handle & Nut Only	01.230
4.	Lock Nut	02.107	11.	Ball Valve	04.103
5.	Threaded Barrel	02.103	12.	Rubber Feet	12607
6.	200 PSI Gauge	01.106			
7.	3/4" - 1/4" Bushing	01.107			

**Reminder:** Always exercise caution when using compressed air.

**PCL Connector is NOT INCLUDED** must be purchased separately.

**Order parts from your distributor or jobber.**  
When ordering parts always give the following information: Part number, description and serial number of your machine.

